

MACKIE 1202 MIXER



BACK OF MIXER:



This is where you plug in the Power Cable.



This is where you plug in the speakers or sub using XLR cables.

TOP OF MIXER:



This is where you plug in the microphone using an XLR cable.



This is where you plug the iPod cable into its respective colors.

Make sure all the knobs in this row are set to 'U' or 12 o'clock, pointing straight up.

Make sure these buttons are pushed DOWN.

Microphone Volume**

Master Volume

Music Volume*



** Adjust the Microphone Volume FIRST by talking into the microphone and turning the knob until you reach the desired volume level.

* Adjust the Music Volume AFTER your microphone volume has been set. Do so by playing music and turning the knob until you reach the desired volume level.

Use the Master Volume to adjust both levels collectively.