

SOUNDCRAFT EPM6 MIXER



UNDERSIDE OF MIXER:



This is where you plug in the Power Cable.



TOP OF MIXER:



This is where you plug in the mic using an XLR cable.

Make sure all the knobs in this row are set to 'U' or 12 o'clock, pointing straight up.

Microphone Volume



This is where you plug in the speakers or subs using XLR cables.



This is where you plug the iPod cable into its respective colors.

Make sure this button is pushed DOWN.

Music/Master Volume*
(Both Yellow Faders - keep at same level)

*Adjust the Music/Master volume FIRST by playing music through your MP3 Player/Phone/Laptop and adjusting the yellow faders until you reach the desired volume level. Match the Microphone volume SECOND by talking into the microphone and adjusting the white fader until you reach the desired volume level.