

# ZED 6FX MIXER



## BACK OF MIXER:



This is where you plug in the Power Cable.



## TOP OF MIXER:



This is where you plug in the microphone using an XLR cable.



This is where you plug in the iPod cable.



This is where you plug in the speakers or sub using XLR cables.

### PLEASE NOTE:

The yellow knobs control the individual FX for each channel. Leave these down if you don't want to use the FX feature. To adjust the Master FX, use the far right MIX red knob on the bottom row of the mixer, to the left of the Master Volume.

Microphone Volume\*\*

Music Volume\*

Master Volume

\*\* Adjust the Microphone Volume FIRST by talking into the microphone and turning the knob until you reach the desired volume level.

\* Adjust the Music Volume AFTER your microphone volume has been set. Do so by playing music and turning the knob until you reach the desired volume level.

Use the Master Volume to adjust both levels collectively.