

The BT Basic



What's Included



Speaker



Microphone



Audio Cable
(for backup)



XLR Cable



IEC Cable



Stands

Speaker Set-Up Instructions



Use this wheel to scroll and click through options on the LCD screen.*



This is where you plug in the IEC Cable.



This is where you plug in the Microphone with an XLR cable.



This is where you plug in the Audio Cable if not using Bluetooth.

*Reference the supplemental Thump 12BST Bluetooth Owner's Manual sheet for instructions on how to pair your device to the speaker via Bluetooth.

Questions?

- Visit our website at www.speakeronastick.com. Click on the 'How To' page and review our 'Troubleshooting' section.
- Reach us at (727) 444-0290 if you rented from our Clearwater, FL location or (616) 988-9671 if you rented from our Grand Rapids, MI location. If your call is outside our business hours, you **must** leave a voicemail for us to be notified that you've called. We will receive the notification on our cell phones. Once we're notified, we'll return your call as soon as possible.
- Send us an email at info@speakeronastick.com.